




Turning Photo Christmas Tree Ornaments by Darnell Jackson

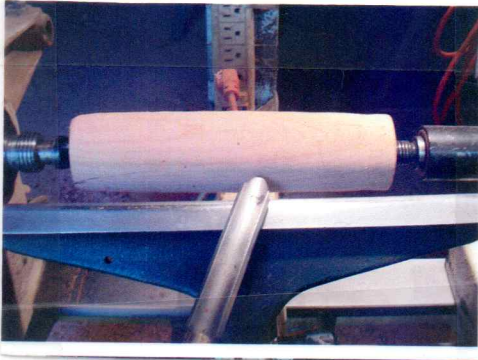


Step 1. Turn blank 2.5-3 inches diameter and 8-9 inches long.

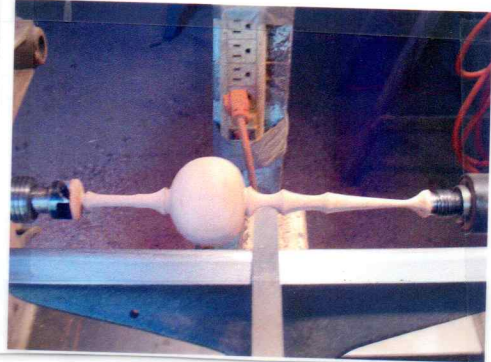


Step 4. Turn finials to your favorite shapes. Sand ornament.

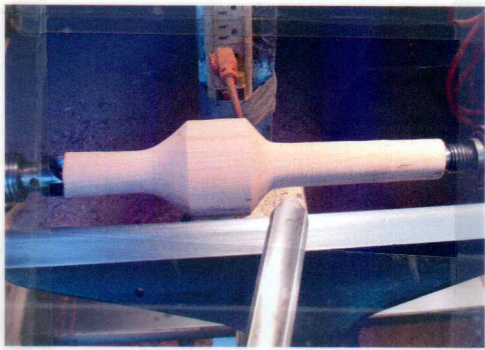


Step 2. Remove wood on each end for finials, leaving area for sphere. Note: Sphere is off center to make "bottom" finial longer than "top" finial.

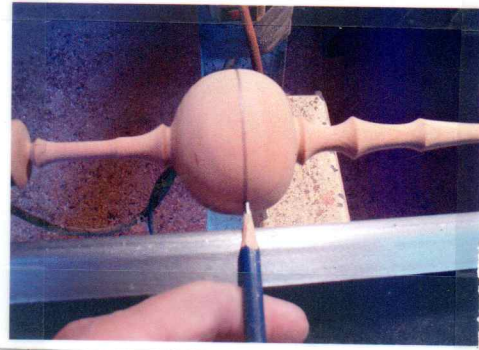


Step 5. Mark center of ornament to help align between center drives.

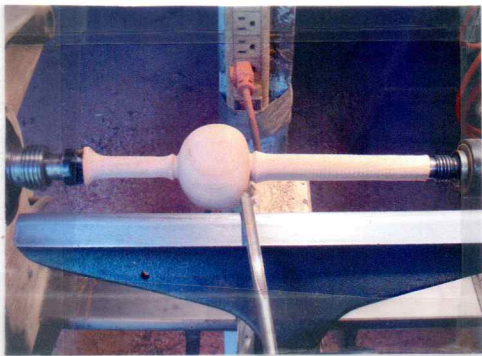


Step 3. Shape sphere (or other shape desired). Reduce finials to desired size.

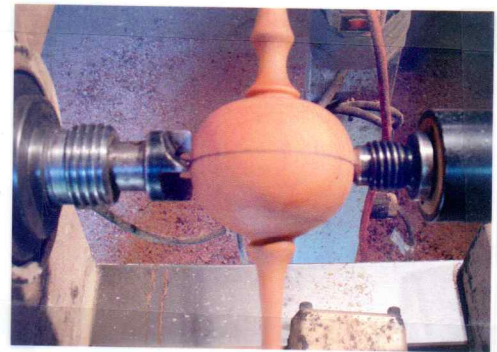


Step 6. Mount ornament between centers on mark.

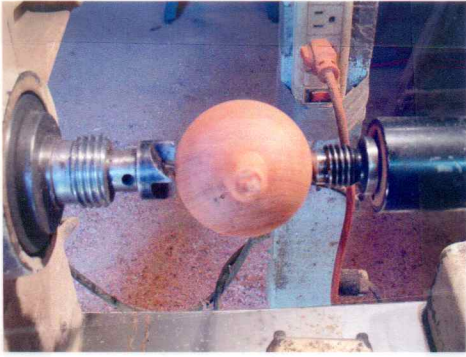


Step 7. Adjust position of ornament so center points are on mark and at the maximum distance of diameter.

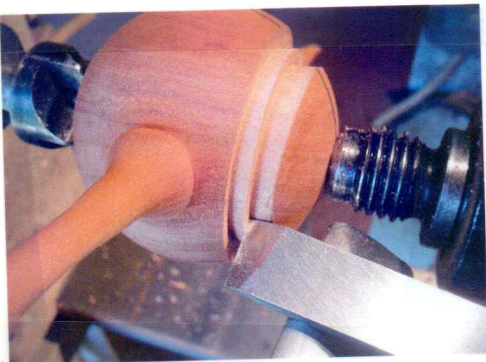

Step 8. Using skew chisel, remove edge of sphere to near base of finials. Stop lath and check depth often to avoid cutting into base of finial. You may have to remove some of center wood to allow ornament to fit onto chuck.

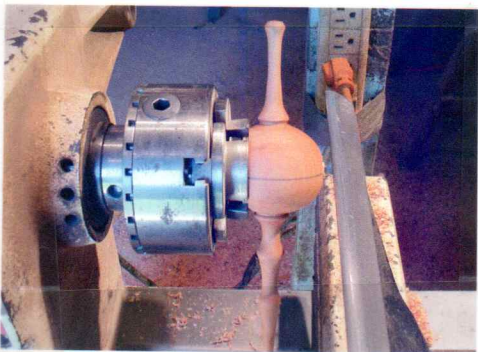

Step 9. Remove ornament from center drives and mount new tenon on chuck.

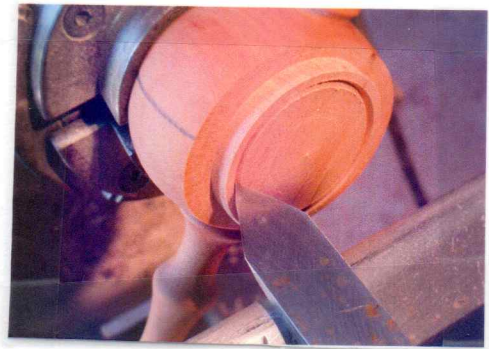

Step 10. Repeat Step 8. Mark inside diameter with pointed tool, leaving tenon strong enough to hold ornament.



Step 11. Hollow inside diameter with bowl gouge or scraper and square insides with skew chisel. Sand surfaces.

Step 12. Reverse ornament on chuck and complete other side as in Steps 10 and 11. Attach hanger to ornament. Finish ornament with favorite finish. Note: Do not wax until picture has been glued in place.



Step 13. Completed ornament.